


Valves and Connectors

K-Valve 0542-00
DIN Valve 0542-30

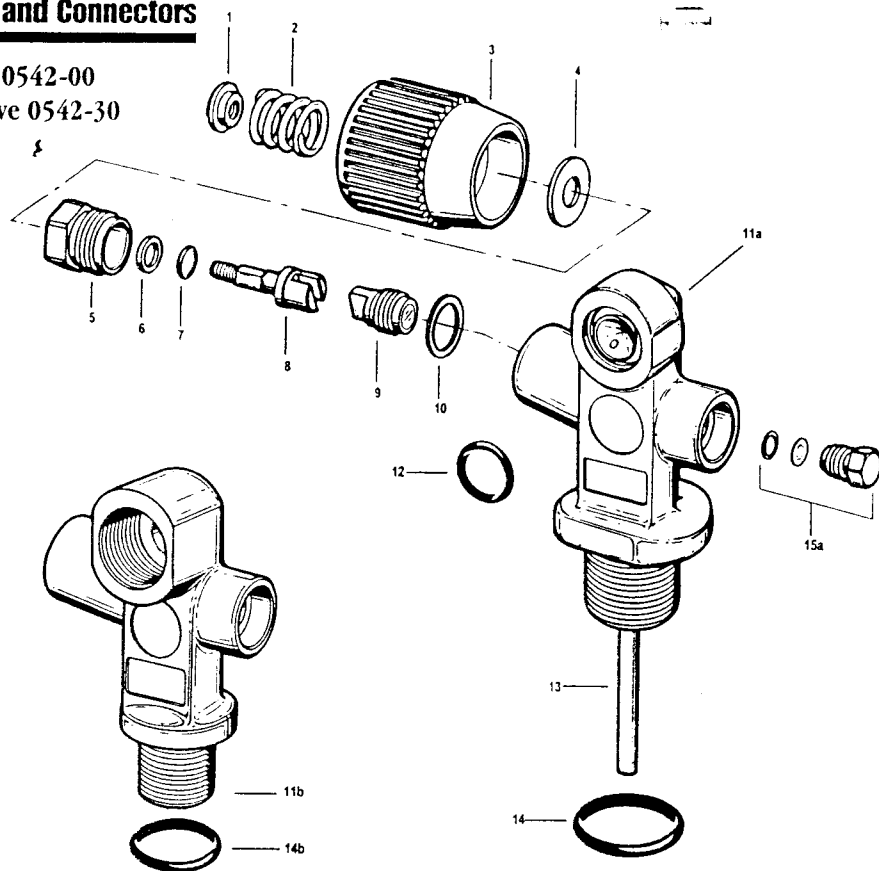


Key #	Part #	Description
----	0542-00	K-Valve - 3,000 psi
----	0542-30	DIN Valve, 240 BAR
1 ----	0542-07	Nut, Handwheel Retaining
2 ----	0542-09	Spring, Handwheel
3 ----	0542-06	Handwheel
4 ----	0542-12	Washer
5 ----	0542-04	Bonnet
6 ----	0542-05	Packing
7 ----	8200-10	O-ring, Stem
8 ----	0542-08	Stem
9 ----	0542-03	Seat Assembly
10 ----	0542-16	Gasket, Bonnet
11a ----	N/A	Body, K-Valve
11b ----	N/A	Body, DIN Valve
12 ----	8200-41	O-ring, Outlet
13 ----	0542-15	Dip Tube
14 ----	8202-14	O-ring, K-Valve
14b ----	0541-14	O-ring, DIN Valve
15 ----	0542-01	Safety Plug Kit, 3,000 psi (Aluminum)
----	0542-61	Safety Plug Kit, 3,500 psi (HP Steel)
----	0542-21	Safety Plug Kit, 2,400 psi (LP Steel)
----	0542-11	Safety Plug Kit, 2,250 psi (LP Steel)
n/s ----	0542-29	Dust Cap, K-Valve

Part numbers in **BOLD ITALICS** indicate standard overhaul replacement part.

Valves and Connectors

J-Valve 0545-00
K-Valve 0540-00

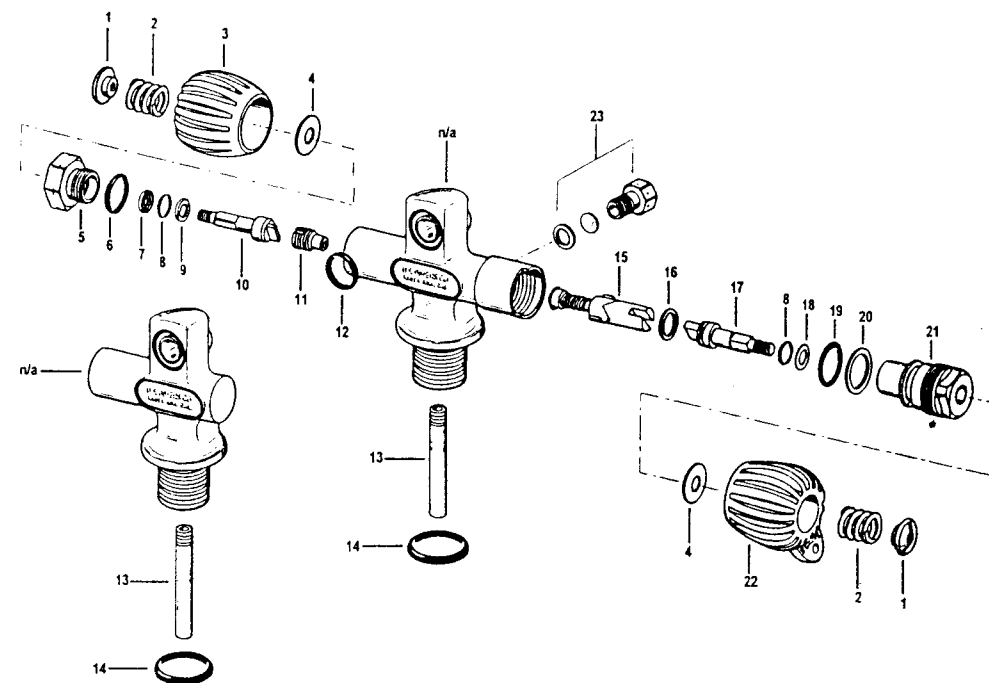

Key #	Part #	Description
----	0545-00	J-Valve (3000 psi)
----	0540-00	K-Valve (3000 psi)
1 ----	0525-18	Nut, Handle Retaining (2 req. on J-Valve)
2 ----	0501-07	Spring (2 req. on J-Valve)
3 ----	0525-41	Handwheel
4 ----	8450-58	Washer (2 req. on J-Valve)
5 ----	0502-33	Bonnet, Left Handed Thread
----	0502-16	Bonnet, Right Handed Thread
6 ----	9570-07	O-ring
7 ----	8285-10	Back-up ring
8 ----	8200-10	O-ring
9 ----	9210-19	Thrust Washer
10 ----	0525-21	Stem, K-Valve
11 ----	0525-19	Seat, J-Valve
11 ----	0501-09	Seat, K-Valve
12 ----	8201-20	O-ring
13 ----	0518-21	Dip Tube
14 ----	8202-14	O-ring (2 required)
15 ----	0525-08	Reserve Assembly
15 ----	0525-48	Reserve Assembly, Red (SEE NOTE)

Key #	Part #	Description
16 ----	8450-21	Washer
17 ----	0525-14	Stem, J-Valve
18 ----	8210-14	Gasket
19 ----	8200-15	O-ring
20 ----	8285-15	Back-up Ring
21 ----	0525-15	Bonnet
22 ----	0525-40	Handwheel, Reserve
23 ----	0502-41	Safety Disc Assembly, 3000 psi
23 ----	0502-42	Safety Disc Assembly, 2250 psi
n/s ----	0743-05	Reserve Pull Rod, J-Valve

NOTE: Reserve Assembly (PN 0525-48) is to be used on valves which have "Japan" stamped on the base of the valve body. If replacement of the reserve assembly is required, do not use the 0525-08 reserve assembly in valves stamped with "Japan". The 0525-48 reserve assembly is dyed red to differentiate between the reserve assemblies.

Part numbers in **BOLD ITALICS** indicate standard overhaul replacement part.